




วิธีแก้ แมพไดร์ที่ window10 แล้วไม่ขึ้น

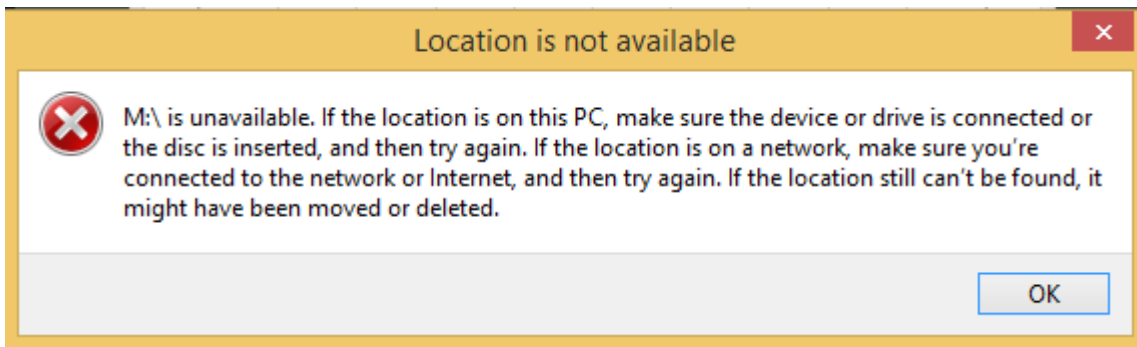

1. Open **Windows Explorer** or **File Explorer**.
2. Select **This PC** in the navigation pane.
3. Right click on empty space on the right pane, or from the **Computer** Ribbon menu, select **Add a network location**.

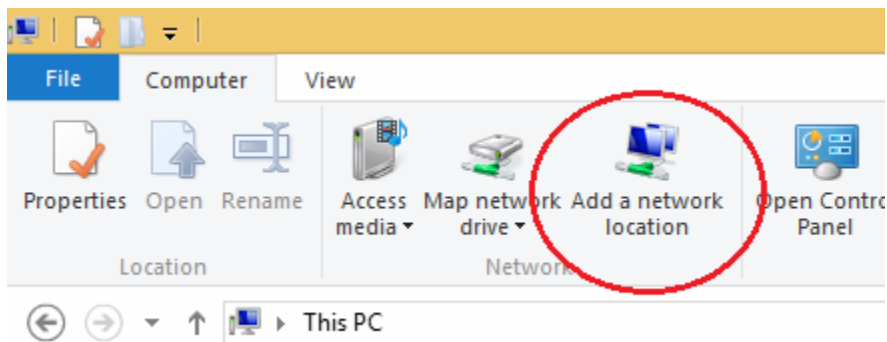

4. Follow the "Add Network Location" wizard to add in the shared folder and network drive.

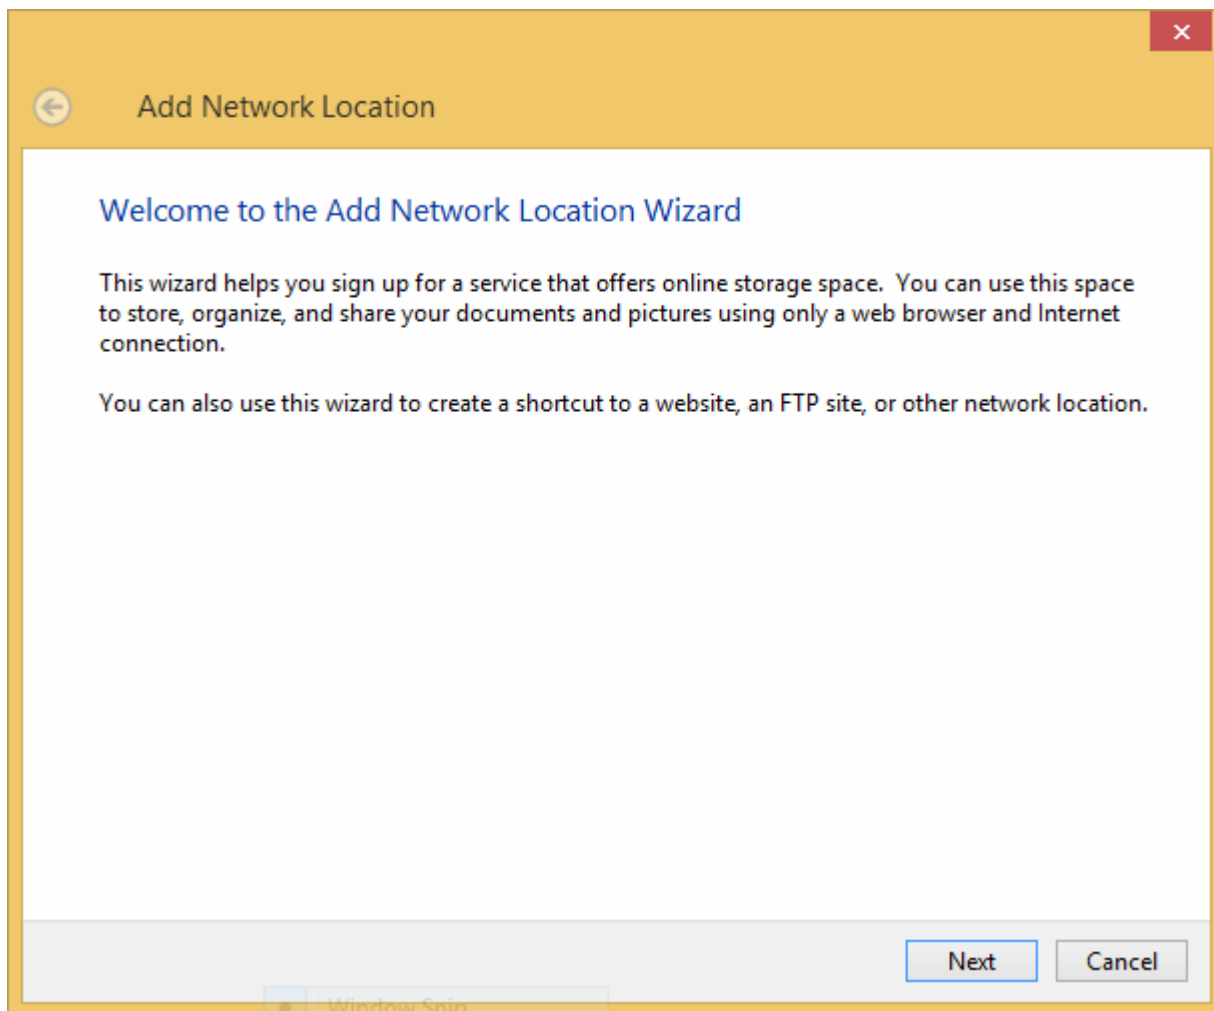

Note: Add network location essentially uses the UNC path instead of mapped drive.

Resolution 3

EnableLinkedConnections registry value enables [Windows Vista](#), Windows 7, Windows 8, [Windows 8.1](#), Windows 10 or later to share network connections between the filtered access token and the full administrator access token for a member of the Administrators group. After you configure this registry value, LSA checks whether there is another access token that is associated with the current user session if a network resource is mapped to an access token. If LSA determines that there is a linked access token, it adds the network share to the linked location.

1. Run **Registry Editor** (regedit).
2. Navigation to the following registry key:

HKEY_LOCAL_MACHINE\SOFTWARE\Microsoft\Windows\CurrentVersion\Policies\System

3. Right click on **System**, then point to **New**, and then click **DWORD (32-bit) Value**.
4. Type **EnableLinkedConnections**, and then press ENTER.
5. Right-click **EnableLinkedConnections**, and then click **Modify**.
6. In the Value data box, type **1**, and then click OK.
7. Restart the computer.

Shortcut โปรแกรม ห้าม Run as admin ไม่อย่างนั้นจะมองไม่เห็นไดรฟ์ Z: